



**1992-UP CHEVY / GMC 2500-3500 SERIES INSTALLATION SHEET
PART #11513RE (DUALY)**

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance feel free to call us at:
1-800-247-3974

**Monday-Friday 8:00 a.m.- 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.
PUTCO Inc. - 216 West First Street - Story City, Iowa 50248**

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION AND BE SURE TO CHECK TO SEE THAT ALL PARTS AND HARDWARE ARE INCLUDED.

Parts List	
Description	Qty
Rear extenders	2
Flaps (#7493BB)	2
1/4" x 1-1/4" SS Slot head screw (#726)	4
1/4" x 3/4" Hex head bolts (#730)	10
1/4" Hex nut (#790)	14
1/4" Lock washer (#780)	14
1/4" x 1/2" Slot head screws (#728)	8
1/4" Lock nut (#796)	8
4' Mini-Trim (#7820)	1
11" Flat brace (#513)	2
1-1/2" (75°) Angle brace (#547)	4
1-1/2" Angle braces(#548)	6
56" Vinyl foam tape (#696)	1
Mudflap Extensions (#9992)	2

Tools Needed for Installation
Electric Drill
1/4" Drill Bit
11/64" Drill Bit
3/8" Wrench
7/16" Wrench and Socket
Screwdriver
Level
Vise Grips

NOTE: Remove the protective plastic coating from the box boards and mud flaps. The steps and figures shown are for the driver side installation.

NOTE: EXHAUST MODIFICATION IS REQUIRED.

Step 1: Attach mud flaps to 1-1/2" (75°) angle brace (#547) and then to 1-1/2" angle brace (#548), with two 1/4" x 3/4" hex head bolts, lock washers, and nuts. Attach 11" flat brace (#513) and 1-1/2" angle brace (#548)

Step 2: Attach rubber extension (#992) to the bottom of mud flap with 4 slot head screws and lock nuts. Next, apply mini-trim (#7820) only along the outer edge of the mud flap (18") and the end of the rear extender (6").

Step 3: Position mud flap up into the fender well, remove existing bolts from inner fender support and upper fender mount and reinstall. Reinstall both bolts.

Step 4: Apply vinyl foam tape (#596) to rear extender. Remove existing bolt from rocker panel. Clamp rear extender onto rocker panel and mud flap. Reinstall bolt in rocker panel. Next, drill 1/4" holes through mud flap and install 1/4" x 3/4" hex head bolts, lock washers, and nuts.


Note: PUTCO recommends applying a high quality automotive wax to maintain the original appearance on your new running boards.

INSTRUCTION SHEET FOR IN11513RE -FEBRUARY 1998



1992-UP CHEVY / GMC 2500-3500 SERIES INSTALLATION SHEET

Figure 1

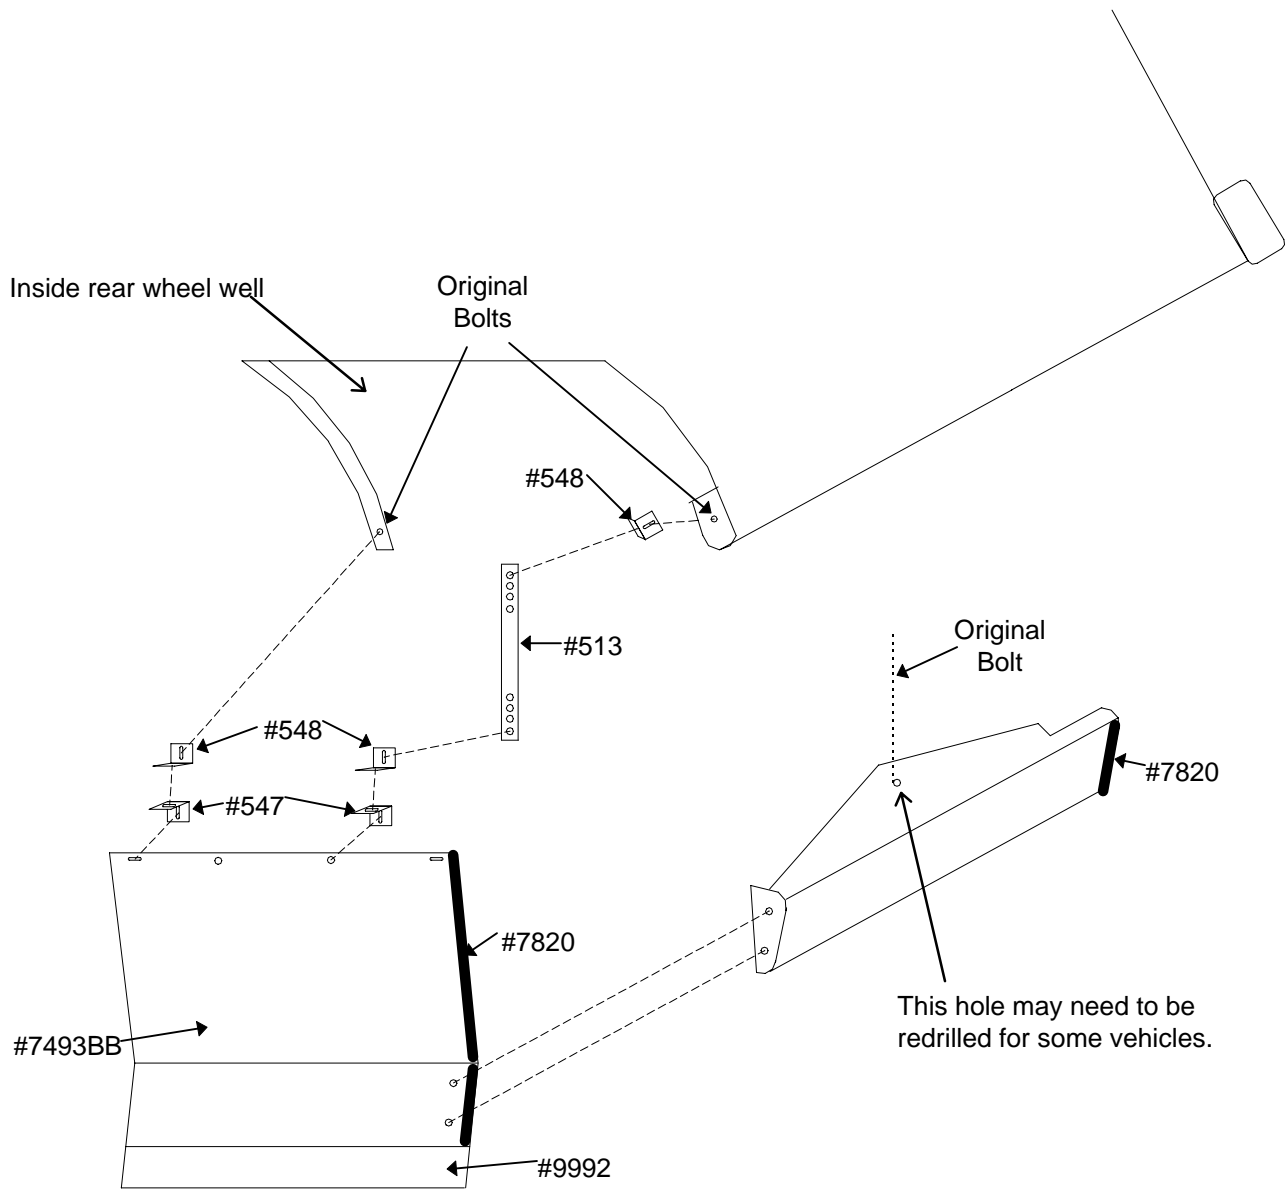

LIMITED WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. Black products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.